


3 Installation Requirements

- If the installation is made up of several RTS motors, only one RTS motor must be powered during programming. All other motors must be disconnected. This will avoid interferences during the initial programming of each motor.
- Use only SOMFY RTS radio controls.
- In order to avoid water penetration, form a "drip loop" with the power cable and use hood when required.

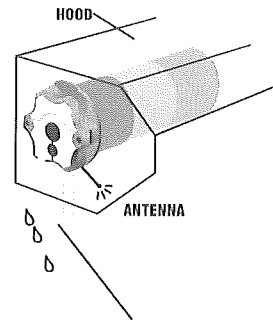

The motor cable should not act as a direct conduit for the water to enter the head of the motor (form drip loops).

NOTE: SOMFY motors conform to IP44 requirements and as such must be protected against direct weather elements such as rain, sleet,...etc.