


### Level the Bottom Rail (If Necessary)

Standard Rectangular shades use a system that allows easy leveling of the bottom rail. It is designed to make slight adjustments (Less than 1") to level the moving rails of your shade. It is not designed to make length adjustments.

Use a flat head screwdriver or a coin (a quarter works best) to turn the adjustment screw in the bottom rail to raise or lower that side of the bottom rail.

One quarter turn of the screw will move the bottom rail up or down approximately 1/4".

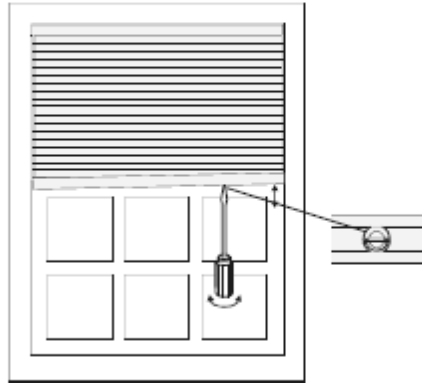

Over-turning the adjustment screw (more than 1" of adjustment) can cause the cord to tangle or wedge inside the rail. The screw should turn easily - Do Not Force.